


Contents Rv NightOwl comes with the following items. Make sure you have all of the contents listed in the illustration below. If not, please contact **RVInnovations** at 1-800-815-2159.


1. Double sided foam tape
2. Stainless Steel mounting screws
3. Rv NightOwl

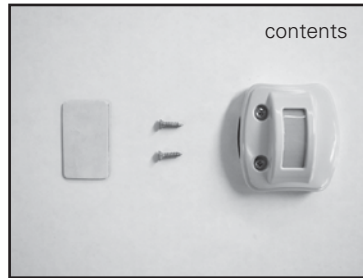

Rv NightOwl Operation

The Rv NightOwl can be used to illuminate hallways, closets, bathrooms, and stairwells on the inside of your RV. Due to its waterproof design, the Rv NightOwl can also be used on the outside of your RV to illuminate keyed entries, cargo latches, and also provide lighting in the areas that house water hookups and electrical hookups. The Rv NightOwl is activated by a motion sensor that automatically turns on when it sees motion. It will turn off after 5 seconds of no motion. The Rv NightOwl only activates in the dark and is in the sleep mode during the day, allowing the batteries to last for more than a season of RVing. The Rv NightOwl should illuminate instantly when the batteries are installed and then go off in a few minutes of daylight. The Rv NightOwl will start to flash when the batteries need to be replaced.

Step 1 Battery Installation: Remove the two screws from the front of the Rv NightOwl and remove the housing by lifting on the lower portion of the Rv NightOwl from the rear housing.

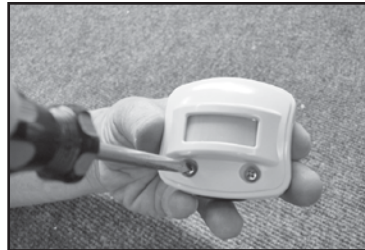


Install 3 AAA batteries into the battery compartment and reattach the Rv NightOwl to the rear housing. Make sure to hook the two tabs into the slots on the upper part of the housing and then push it into place and install the two phillips head screws.



Before installing the Rv NightOwl using the double-sided tape or the mounting screws, we recommend that you test out the location you want to illuminate in the dark to get the best results.

Installing the Rv NightOwl inside of the RV (Double sided tape)

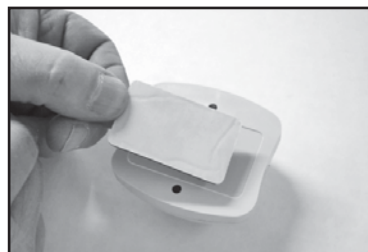





Step 1 Peel the paper backing from one side of the double-sided foam and apply it to the back of the Rv NightOwl housing.



Step 2 Make sure the surface you will be installing the Rv NightOwl on is free from dirt and oil. Peel the remaining paper backing from the double-sided foam and push and hold the Rv NightOwl against the surface for at least 10 seconds.

Installing the Rv NightOwl on the outside of the RV (Permanent install)

Step 1 Remove the two screws from the front of the Rv NightOwl, and remove the housing by lifting on the lower portion of the Rv NightOwl from the rear housing.

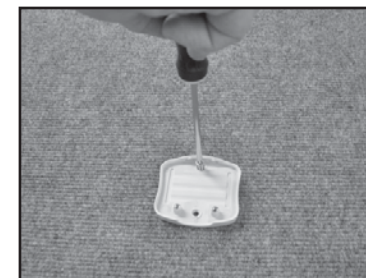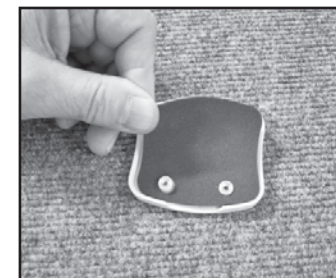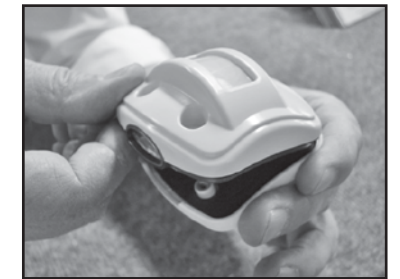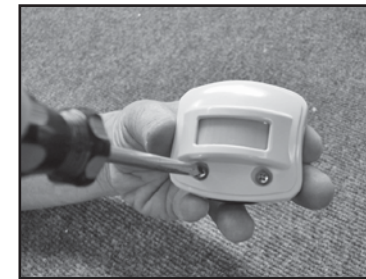

Step 2 Remove the foam seal from the rear housing to expose the mounting holes. Place the rear housing against the surface you are mounting to and mark the two holes. Drill the two marked holes with a 1/16" drill bit. Mount the rear housing using the two screws provided and replace the foam seal.

Step 3 Install 3 AAA batteries into the battery compartment and reattach the Rv NightOwl to the rear housing. Make sure to hook the two tabs into the slots on the upper part of the housing, and then push it into place and install the two phillips head screws.



RVInnovations™

4371 Platte Avenue
Sedalia, CO 80135

Phone: 1 800.815.2159
FAX: 1 303.814.0977
www.RVInnovations.com